



TECH NOTE

AUTOMOTIVE – ACCESSORY BELT DRIVE SYSTEM INSTALLATION INSTRUCTIONS FOR TENSIONER 38236

Despite a difference between the design of the OE tensioner and the Gates tensioner (Fig. 1), they do the same job. However, there is a different installation procedure. In the

withdrawn position, the OE tensioner can be locked using a pin. The new belt is installed over the (top) idler.



Fig. 1



Fig. 2

The Gates tensioner must be held in the withdrawn position, by means of an appropriate 15mm wrench, in order to fit the belt (Fig. 2). Gently ease the tensioner onto the belt.

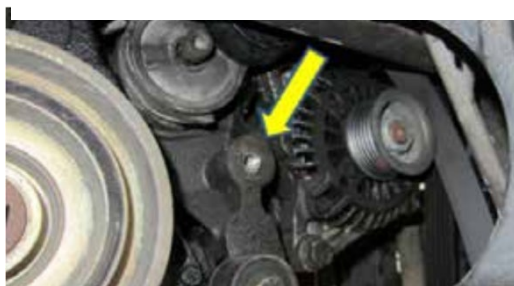


Fig. 3

Fitting tip: Remove the (top) idler before taking the old tensioner off (Fig. 3).

BULLETIN: TSB020_AU

PART NUMBER:

- 38236

MAKE:

- Peugeot
- Citroen
- Fiat

ENGINE:

- 1.9L Diesel
- 2.0L Diesel
- 2.2L Diesel

YEAR:

- 1998-2008

GATES AUSTRALIA PTY LTD

200 National Drive, Dandenong South VIC 3175
PH: +61 3 9797 9666 FAX: +61 3 9797 9600

WWW.GATES.COM/AU/EN.HTML
FOLLOW: GATES AUSTRALIA

